

# Mueller® H-704 Hydraulic Power Operator

## GENERAL

This publication addresses some of the safety issues when operating this machine. Neglecting to follow these recommendations may pose serious hazards or result in failure of equipment. The operator of this machine must have access to, have read, and fully understand this document and the recommendations and operating instructions for the H-704 Hydraulic Power Operator.

The H-704 Hydraulic Power Operator provides hydraulic power to drive various Mueller® Drilling Machines. Refer to current Mueller product catalog for machine compatibility.

**⚠ WARNING: The operator of this machine must adhere to the following instructions to reduce the possibility of misuse of the machine or accident. Failure to observe these instructions and the following warnings could result in serious bodily injury.**

**Always wear eye protection when operating this machine.**

**DO NOT use damaged, frayed, loose or deteriorated hydraulic hoses or fittings.**

**Always turn off the hydraulic supply and disconnect the hydraulic supply hose before installing, removing or adjusting any accessory on this machine, or before performing maintenance on this machine.**

**⚠ CAUTION: DO NOT modify this machine. Doing so could void the warranty and create a safety hazard.**

## SPECIFICATIONS FOR H-704 HYDRAULIC POWER OPERATOR

- Weight (Operator Only) – 51 lbs.  
(23.1 kg)
- Length – 28" (71 cm)
- Width – 13" (33 cm)
- Height – 8" (22 cm)
- Flow Range – 7 to 9 gpm (27-34 lpm)
- Motor Speed – 33 rpm at 8 gpm  
(30 lpm)
- Max. Pressure (continuous) –  
2000 psig (138 bar)
- Max. Pressure (intermittent) –  
2750 psig (190 bar)
- Operation – reversible
- The gear case ( $\frac{3}{4}$  pint capacity) is filled with the proper lubricant at the factory and requires no periodic service. However, if leakage has occurred or the gear case requires repair, contact Mueller Customer Service at 1-800-423-1323 for return instructions.



Water (U.S.)  
1.800.423.1323  
www.muellercompany.com  
moreinfo@muellercompany.com

Water (Canada)  
1.705.719.9965  
www.muellercanada.com  
more-info@muellercanada.com

Gas (North America)  
1.800.798.3131  
www.muellergas.com  
moreinfo@muellercompany.com

International  
1.423.490.9555  
www.mueller-international.com  
international@muellercompany.com

# Mueller® H-704 Hydraulic Power Operator

## 1. OPERATING INSTRUCTIONS

---

**⚠ CAUTION:** Hydraulically driven power tools are not generally insulated against coming in contact with sources of electrical current. Take necessary precautions if sources of electrical current are nearby.

**⚠ WARNING:** Operate this machine below the maximum rated pressure specified.

A. Be sure to read the Mueller Operating Instructions for the Mueller drilling machine that is being powered by the H-704 operator.

B. Install drilling machine on pipe according to the drilling machine's operating manual.

C. After the drill or pilot drill has been positioned at the pipe according to the machine instructions, attach the operator to the machine.

## 2. CHECK THE DRILLING MACHINE SET UP

---

A. Turn on the hydraulic unit and check the hydraulic pressure. Note maximum pressure permissible in the Specifications section of this instruction sheet (page 1).

B. Momentarily activate the on/off lever from the neutral position by pulling it toward the operator handle to assure the drill or shell cutter is turning in

the correct direction. It should turn **clockwise** when observed from the operator end of the drilling machine.

**⚠ CAUTION:** Moving the lever away from the operator handle will reverse the turning direction and could damage the tools during standard drilling or cutting operations.

C. Once the correct turning direction has been verified, activate the on/off lever by pulling it toward the operator handle and conduct the drilling operation according to the drilling machine operating manual.

## 3. DISCONNECTING HYDRAULIC POWER OPERATOR

---

A. *For drilling operations:* Once the drilling is completed, follow the machine operating instructions to clear the tools from the pipe, return the drilling machine to its rear most position, and remove the operator from the machine.

B. *For drilling and tapping operations:* Once the tapping operation is completed, follow the machine operating instructions for reversing the operator, clearing the tools from

the pipe, returning the machine to its rear most position, and removing the operator from the machine.