



**Reliable Connections™**

## H-11199 Relubricating Tool

### **Relubricating Instructions**

1. Unscrew cap from the H-11199 Relubricating Tool.
2. Remove shaft from body and turn handle counter-clockwise to retract shaft until “O” ring and piston are withdrawn into cap.
3. Insert a stick of Mueller Grease (H-853) into the body.
4. Replace and tighten cap.
5. Turn handle clockwise to force grease out of the nozzle opening.
6. Be sure the Luboseal® Stop is in either the FULLY OPEN or FULLY CLOSED position. This aligns the vertical groove in the key with the grease port recess.
7. Remove the grease plug by using the hex wrench on Relubricating Tool handle. Screw tool nozzle into grease plug threads as far as possible.
8. Turn the handle clockwise, forcing the grease into the vertical groove in the key. If immediate resistance is encountered, probably the groove in the key is not aligned with the grease port. Turn the key slightly in either direction until the grease begins to flow.

*(continued)*

## Relubricating Instructions (*continued*)

- The amount of grease required to relubricate a Luboseal® Stop depends upon how hard the stop turns and how much grease must be replaced. The table below shows the number of complete revolutions of the handle required to fully relubricate each size of Luboseal® Stop. The table is based on the assumption that the stop has excessive port leakage and that considerable grease has been dissipated.

Size of Stop	Revolutions of Handle to Fill Stop
3/4"	6
1"	7-1/2"
1-1/4"	10
1-1/2"	13-1/2"
2"	16
2-1/2"	25-1/2"

- **NOTICE:** Do not over lubricate. If the condition of the stop is not too bad, not as many turns of the handle will be required as is indicated in the table. The service technician, after a few trials, should be able to tell by the feel of the handle whether or not the stop is filled with grease. Be sure to use MUELLER GREASE STICKS. They are made especially for MUELLER STOPS.

9. Replace grease plug and tighten, using hex wrench on Relubricating Tool handle.

## Phone: (800) 798-3131

By deviating from the above listed instructions, you will void any product warranty and release Mueller Co. and its affiliated entities from any and all liability associated with the installation or use of this product. For details on the product's warranty, terms, and conditions, please visit [www.muellergas.com](http://www.muellergas.com).

© 2016 Mueller Co., LLC. All rights reserved.

Form 9664 05/16