

No-Blo® Service Stop Tees

#### **Reliable Connections**

## **Operating Instructions**

- 1. Screw stem down against seat.
- 2. Polish stem and seat by turning stems back and forth several times.
- Hold stem in closed position with screwdriver. BACK OFF bushing (counter-clockwise) approximately two turns with wrench.


When preparing to insert the stem and bushing into the tee body under pressure with drilling machine, attach bushing to the inserting tool. Screw the stem into the bushing as far as it will go. Then back it out one half of a turn.

#### To Close

With 4" screwdriver hold stem firmly in closed position. With wrench turn bushing counter clockwise approximately two turns.

# To Open

Turn bushing clockwise with wrench then raise stem with screwdriver.

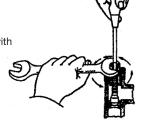

### Phone: (800) 798-3131

By deviating from the above listed instructions, you will void any product warranty and release Mueller Co. and its affiliated entities from any and all liability associated with the installation or use of this product. For details on the product's warranty, terms, and conditions, please visit www.muellergas.com.

© 2016 Mueller Co., LLC. All rights reserved.

Form 8431 04/16