


Gasket Replacement Kit Instructions

2", 2-1/2", 3" & 4" H-10917 Slide Gate Valve "Yellow"

Valve Number	Kit Number	Installation Torque
2" H-10917	681794	400/450 in/lbs or 33.3/37.5 ft/lbs
2-1/2" H-10917	681795	400/450 in/lbs or 33.3/37.5 ft/lbs
3" H-10917	681796	400/450 in/lbs or 33.3/37.5 ft/lbs
4" H-10917	681765	900/950 in/lbs or 75/79.2 ft/lbs

These repair kits are for replacing the gasket in Mueller 2", 2-1/2", 3" and 4" Slide Gate Valves. Each kit includes all gaskets and O-rings and a new set of Spring Cone Washers. When properly installed, the washers help to provide a leak tight seal.

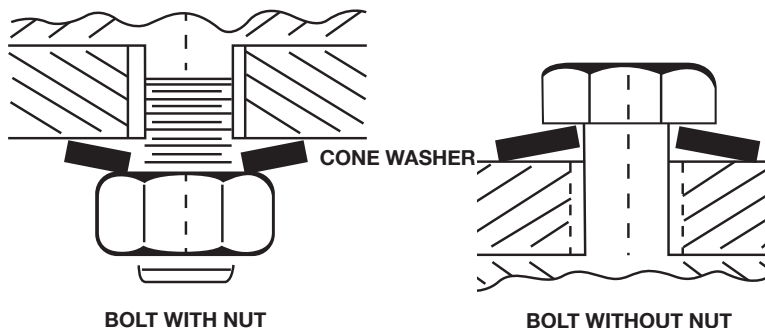

The Spring Cone Washers are installed under the **NUT** and the nut tightened to the torque installation recommendations above. If the bolt is not a through bolt, the washer should be installed under the **BOLT HEAD** and the bolt tightened to the proper values. Alternate tightening of bolts from side to side and top to bottom. The small end of the Spring Cone Washer should be against the nut or bolt head. (see illustrations)

The valve should be periodically tested for leaks using a soap solution. If leakage is evident, retighten the nuts and bolts to proper torque values.

Phone: (800) 798-3131

By deviating from the above listed instructions, you will void any product warranty and release Mueller Co. and its affiliated entities from any and all liability associated with the installation or use of this product. For details on the product's warranty, terms, and conditions, please visit www.muellergas.com.

© 2016 Mueller Co., LLC. All rights reserved.

Form 11885 05/16